

N6.2400 G-VF3
 N6.2900 G-VF3
 N7.3600 G-VF3
 N7.4500 G-VF3

elco



Operating instructions

For specialist installation engineers

Gas burners 2-25

en



de, fr 4200 1030 7700

it, nl 4200 1032 0600



..... 4200 1030 7500

Overview

Contents

Overview	Contents.....	2
	Important information.....	2
Operation	Burner description.....	3
	Gas start-up mode, gas operating mode.....	4
	General safety functions.....	4
	Equipment options.....	5
	Automatic furnace controller LFL 1.../LGK.....	6
	Gas valve VGD with SKP actuator.....	7
	Gas valve MBC-VEF.....	7
Assembly	Boiler lining for G-VF3 burner, burner assembly.....	8
	Gas connection.....	9
	Gas manifold, Pressure take-off pipes.....	10
	Checking, assembling the combustion components.....	11
	Gas connection, Electrical connection.....	12
	Checks before commissioning.....	12
Commissioning	Working cycle test, Firing.....	13
	Safety unit settings and checks.....	13
	Actuator, Limit switch setting.....	14
	Sensor.....	15
	Gas pressure switch, air pressure switch.....	16
Gas valves and instruments group	Description.....	17
	Basic construction.....	17-19
	Gas valve leakage controller.....	20
Servicing	Maintenance.....	21-22
	Exhaust gas test, trouble shooting instructions.....	23-24
	Operating trouble.....	25

Important information

N6 and N7 G-VF3 burners are designed for the low-pollutant combustion of natural gas. The design and function of the burners meet standard EN 676. They are suitable for use with all heat generators complying with standard within their respective performance range. Any other type of application requires the approval of ELCO.

Installation, start-up and maintenance must only be carried out by authorised specialists and all applicable guidelines and regulations must be complied with.

Burner description

N6 and N7 G-VF3 burners are modulating pneumatic fully automatic monoblock devices. The special design of the combustion head enables combustion with low levels of nitrogen oxide and increased output. Class 3 type-approval in accordance with EN676 certifies that the lowest emission values have been achieved and means that the national environmental regulations have been met.

AT: KFA 1995, FAV 1997

CH: LRV 2005

DE: 1.BImSchV

Emissions values may differ, depending on combustion chamber dimensions, combustion chamber load and the firing system (three-pass boilers, boilers with reverse firing). For specifying warranty values, the conditions for the measuring equipment, tolerances and humidity must be observed.

Packaging

The burner is supplied packaged in three boxes on a pallet:

- Burner body with:
 - integrated switch cabinet
 - flange seal and securing screws
 - operating instructions, circuit diagram and spare parts list
- Combustion head
- Compact gas train with integrated or external filter

The following standards should be observed in order to ensure safe, environmentally sound and energy-efficient operation:

EN 226

Connection of fuel oil and forced-draught gas burners to a heat generator

EN 60335-1, -2-102

Specification for safety of household and similar electrical appliances, particular requirements for gas burning appliances

Gas lines

When installing the gas lines and trains, the general directives and guidelines, as well as the following national regulations, must be observed:

- CH: - G1 instruction text from SSIGE
- EKAS form no. 1942,
liquefied gas directive, part 2
- Cantonal authority guidelines
(e.g. directives for the pilot valve)
- DE: - DVGW-TVTR/TRGI

Installation location

The burner must not be used in rooms with aggressive vapours (e.g. hair spray, tetrachloroethylene, carbon tetrachloride), high levels of dust or high air humidity (e.g. laundry rooms).

If no connection to an air exhaust system is provided for the air supply, there must be a supply air inlet measuring:

- DE: up to 50 kW: 150 cm²
per additional kW: ; + 2.0 cm²
- CH: QF [kW] x 6 = ...cm²; but at least 200cm².

Variations may arise as a result of local regulations.

Declaration of conformity for gas burners

We,
Elco Burners GmbH, Herbert-Liebsch-Straße 4a, 01796 Pirna, Germany,
declare under our sole responsibility that the products
N6.2400 G-VF3
N6.2900 G-VF3
N7.3600 G-VF3
N7.4500 G-VF3

conform to the following standards
EN 50165
EN 12953-7
EN 12952-8
EN 61000-6-2
EN 61000-6-4
EN 676

These products bear the CE mark in accordance with the stipulations of the following directives

- | | |
|-------------|------------------------------|
| 2006/42 /EC | Machinery directive |
| 2004/108/EC | EMC directive |
| 2006/95/EC | Low voltage directive |
| 2009/142/EC | Gas appliances Directive |
| 97/23/EC | Pressure Equipment Directive |

Pirna, 26th May 2010
D. HOFFMANN

We accept no responsibility for damage arising from:

- inappropriate use.
- incorrect installation and/or repair on the part of the buyer or any third party, including the fitting of non-original parts.

Final delivery and instructions for use


The firing system fitter must supply the operator of the system with operating and maintenance instructions on or before final delivery. These instructions should be displayed in a prominent location at the point of installation of the heat generator. They should include the address and telephone number of the nearest customer service centre.

Notes for the operator


The system should be inspected by a specialist at least once a year. Depending on the type of installation, shorter maintenance intervals may be necessary! It is advisable to take out a maintenance contract to guarantee regular servicing.

Overview

Burner description

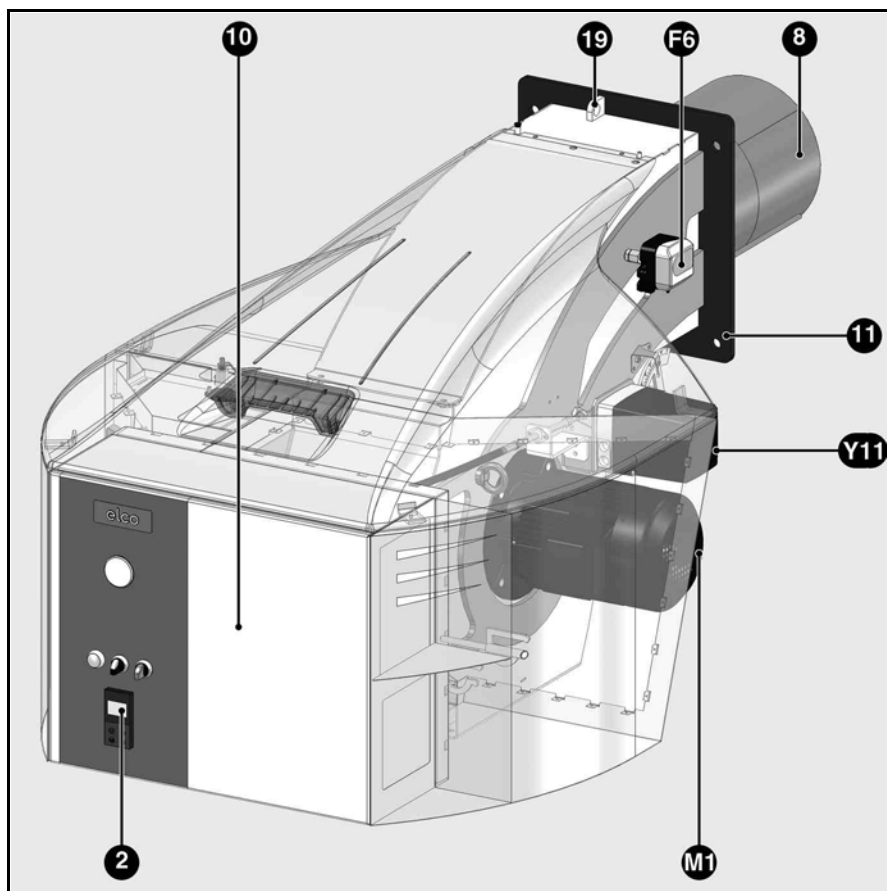

- 2 Power controller (option)
- 5 Housing
- 6 Gas inlet flange
- 7 Gas damper (manual adjustment)
- 8 Burner flame tube
- 10 Integrated electrical cabinet
- 11 Burner fixing flange
- 13 Air intake box
- 19 Hoisting eyes
- F6 Air pressure switch
- M1 Blower motor
- Y10 Actuator for air damper
- pF Furnace pressure take-off tube

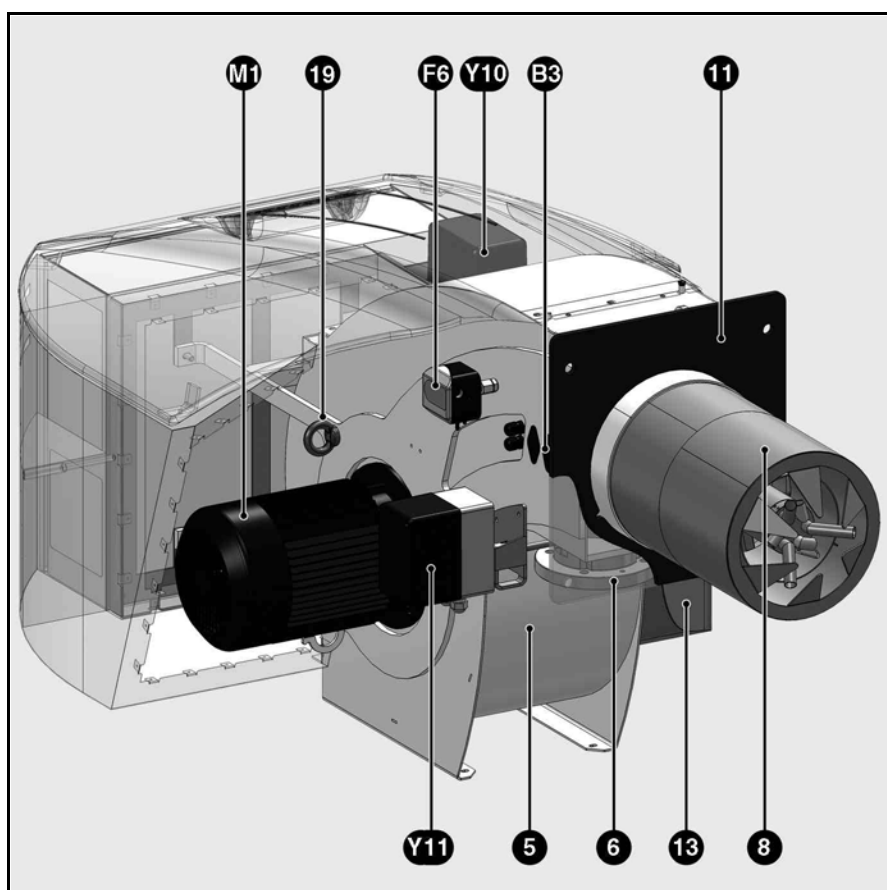

Operation

Gas start-up mode Gas operating mode General safety functions

Gas start-up mode

As soon as the furnace system is required to supply heat, the burner control circuit will close and the program flow started. When the program has come to its end, the burner will be turned on.

An automatic test is made for the tightness of the gas valves prior to each burner start.

The air damper is in its closed position when the burner is out of operation.

The electric actuator will open the closed air damper to its full-load position so that the burner will ventilate the furnace and the exhaust hoods with the specified air rate. Shortly after the pre-ventilation process has been started the lack-of-air cut-out must change over to operating position within a certain time, i.e. the minimum air pressure setting must be reached and maintained until the burner is turned off. At the end of the specified pre-ventilation time the air damper will be moved into its partial-load position in a linked control concept with the gas damper.

The ignition transformer is activated.

After the pre-ignition time, the main gas valves are open and the gas comes out from injectors where it is mixed in the combustion head with air coming from the fan. The ignition of the gas air mixture is done directly by a high voltage spark on a gas injector. During the safety time, a stable flame is formed and is monitored by an ionisation sensor. The ignition is stopped before the end of the safety time and the burner operates at its minimum power. The start-up programme is completed.

Gas operating mode


After the flame has developed the load regulator will be enabled which brings the burner into its operating position. The load regulator will now control the burner automatically between its partial-load and full-load stages. Depending on the heat demand, the electric actuator of the compound control system will be fed with the OPEN or CLOSE command via the regulator and thus increase or decrease the gas and air flow rates. This compound control system will vary the positions of the gas control valve and air damper and thus regulate the gas flow rate in a linked concept with the air flow rate. The burner can either be controlled by a 2-stage sliding or, if a respective controller is provided, a stepless control concept. The stepless control will allow

the burner to be operated at any desired stage between its partial-load and full-load positions.

The air damper will be closed when the burner is out of operation and will thus prevent cold air flowing through the burner chamber, heat exchanger and chimney. The interior cooling losses will thus be greatly minimized.

Attention:

If there are shut-off dampers in the flue gas tract they must be complete open. Otherwise there will be a high danger of low-speed detonation or explosion! The open-position of the shut-off damper can be assured by the integration of the opening contact of the shut-off damper in the safety chain of the heat generator.

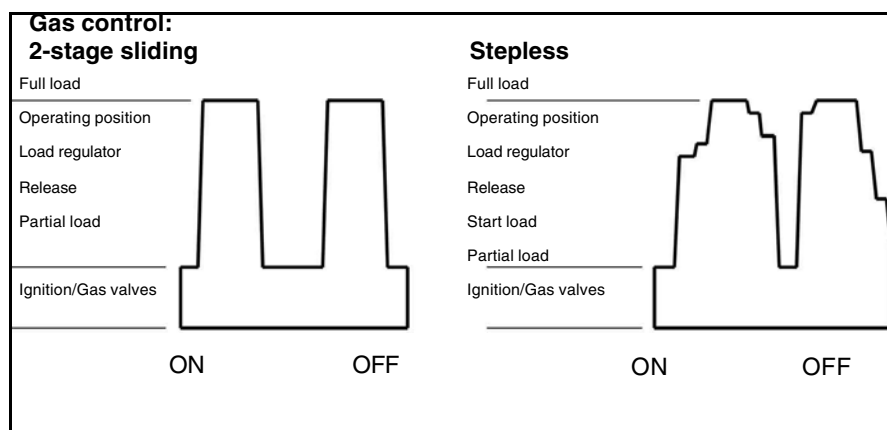

General safety functions

In case a flame does not develop when starting the burner (fuel release), the burner controller will shut off at the end of the safety period (shut-off on trouble). A shut-off on trouble will also occur in the case of flame failure during operation, air flow failure during the pre-ventilation phase and pressure failure during the whole period of burner operation. Any failure of the flame signal at the end of the safety period and a flame signal during the pre-ventilation phase (external light control) will result in a shut-off on trouble with the automatic furnace controller being locked.

The trouble is indicated by the trouble signal lamp lighting up. The automatic furnace controller can be unlocked immediately after a shut-off on trouble by pressing the unlocking key. The program unit will return to its starting position and proceed with the restart of the burner.

A voltage failure will result in a regular shut-off of the burner. After voltage recovery, the burner can be automatically restarted unless another interlock is active, e.g. one caused by the safety circuit. In any case, the fuel oil supply will be immediately stopped upon occurrence of a trouble.

The control unit will stop at the same time causing also the trouble location indicator to stop. The symbols will indicate the kind of trouble.

Equipment options

Please note!

The gas outlet pressure (gas regulating pressure) must always be less than the gas inlet pressure but higher than the total pressure loss of the system.

Equipment option: speed control

The burners can be equipped with a speed controller as an option.

During long burner operating periods in the partial load range in particular, the reduction in blower speed helps to conserve electrical energy and reduce noise emissions from the burner blower itself.

The speed of the blower is measured by a Namur sensor and controlled to the programmed reference value for the current output level.

Equipment option: O₂ control / CO control

To improve the efficiency of the system, the combustion manager can be equipped with residual oxygen or CO control (CO control available only with the use of a Lamtec burner controller).

The residual oxygen is measured in the flue gas of the heating system by an O₂ measuring probe with zirconium oxide sensor and sent to the combustion manager as a correction factor. Thanks to O₂ control, it is possible to eliminate variations in ambient conditions (e.g. combustion air temperature and


humidity, calorific value fluctuations, etc.) and significantly reduce the air surplus required for calibration. Reference value deviations are controlled by corrections to the blower speed or the air flap position. With the use of CO control (only possible with gas operation), the CO content is measured in addition to the residual oxygen. The air surplus is reduced to the "CO edge" by a correction to the blower speed or the air flap position. The correction factors are determined in a system-specific "learning process" and stored temporarily in the combustion manager. This makes it possible to maximise the system's heating efficiency across the entire output range and optimally manage the combustion process. For further information, please refer to the manufacturer's documentation for the electronic combustion manager.

Automatic furnace controller LFL 1.../LGK ...



The LFL 1.../LGK... type controller is designed to control and monitor burners working according to a stepwise or modulating principle. A detailed functional description with technical data and project planning information with respect to the automatic combustion controllers can be found in the annex and in the documents:

LFL 1...-7451/LGK...

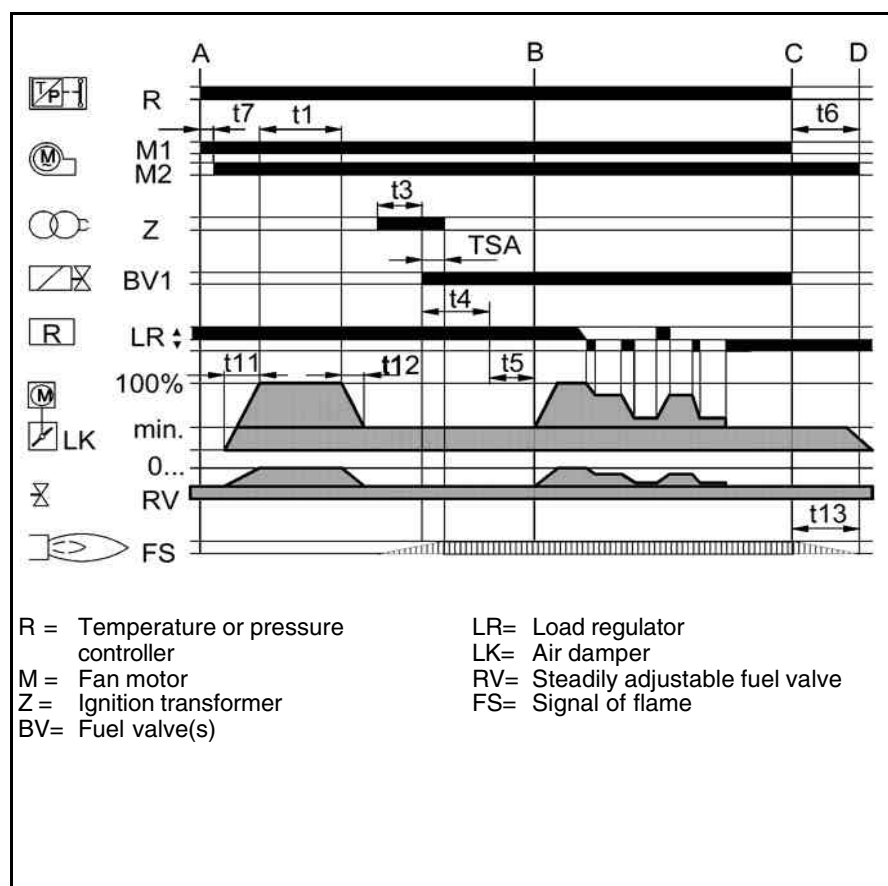


Functional diagram LFL 1.../LGK...

- A = Starting type interval
- A-B= Flame development interval
- B = Burner has reached operating position
- B-C= Burner operation (heat generation)
- C-D= regular shut-off
- t1 Pre-ventilation time
- t2 Safety time
- t3 Pre-ignition time
- t4 Fuel valve enable
- t5 Load regulator enable
- t6 post ventilation time
- t7 start delay interval for ventilation motor
- t11 „OPEN“ run time of air damper
- t12 „CLOSE“ run time of air damper
- t13 Permissible afterburn time

Operation

Gas valve VGD with SKP actuator


Gas valve MBC-VEF

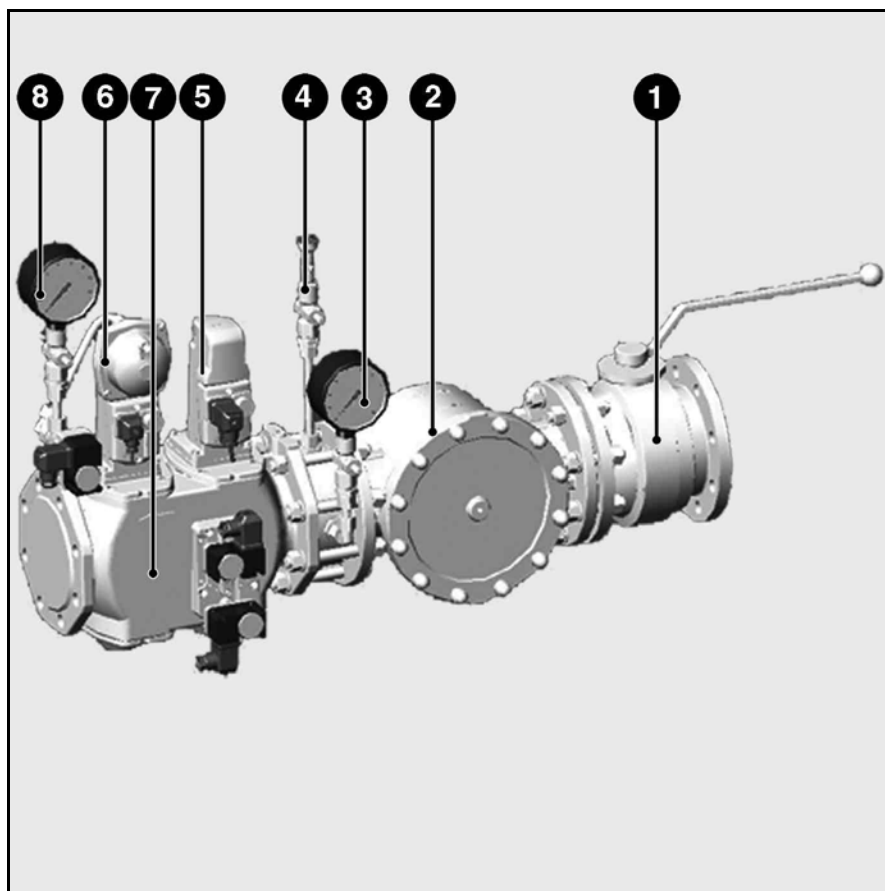

- 1 Gas ball valve
- 2 Filter (under the cover)
- 3 Gas manometer with push button (upstream)
- 4 Test burner with push button (option)
- 5 Actuator SKP 15
- 6 Actuator SKP 75
- 7 Gas main valve VGD..
- 8 Gas manometer with push button (downstream) (option)

Technical data

Input pressure	360 mbar max.
Ambient temperature	-15 to +50°C
Voltage	230 V/ 50 Hz max.
Protection rating	IP 54

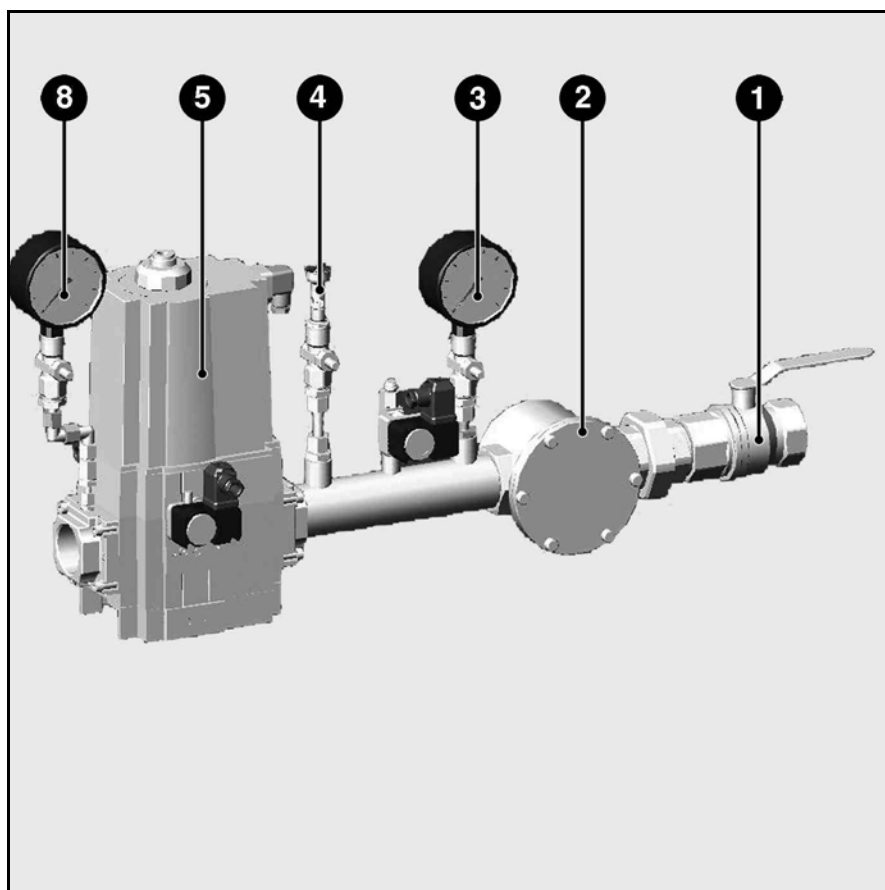

- 1 Gas ball valve
- 2 Filter (under the cover)
- 3 Gas manometer with push button (upstream)
- 4 Test burner with push button (option)
- 5 Compact gas train (safety valve + main valve)
- 8 Gas manometer with push button (downstream) (option)

Technical data

Input pressure	360 mbar max.
Ambient temperature	-15 to +50°C
Voltage	230 V/ 50 Hz max.
Absorbed output (in operation)	250 W max
Protection rating	IP 54


Assembly

Boiler lining for G-VF3 burner Burner assembly

Boiler lining

The burner lining must be installed right-angled to the burner tube. Possible trimming work (beveling, rounding) as required for reverse boilers, for example, should be done at a diameter not below 70% of the combustion chamber diameter. The space between the flame pipe of the burner and the boiler lining should be lined with heat resistant material, such as Cerafelt.



This space is not allowed to be lined with brickwork

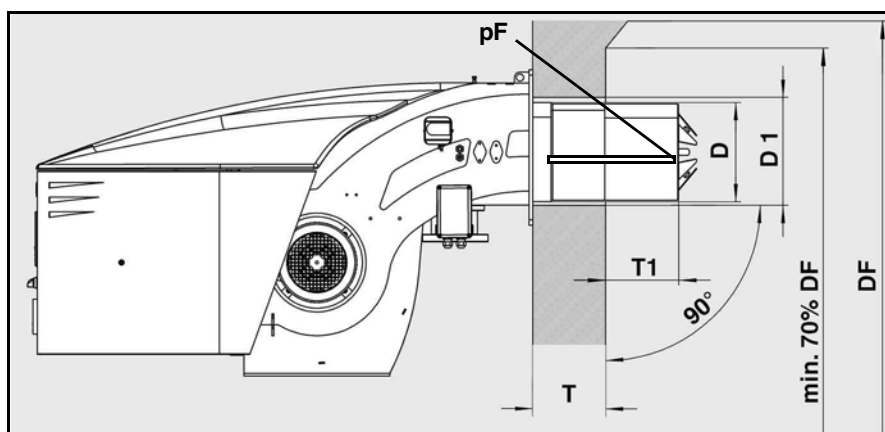

D = see dimensioned drawings
D1 = see dimensioned drawings
DF = combustion chamber diameter
T1 > 80 mm
T = depth of boiler lining
(option: extensions: see technical data)


Note for reverse flow boilers!

For reverse flow boilers the dimension T1 is only a recommended value. Depending on type of boiler the burner head must stand at least 50 mm ahead the opening for flue gas turning back.

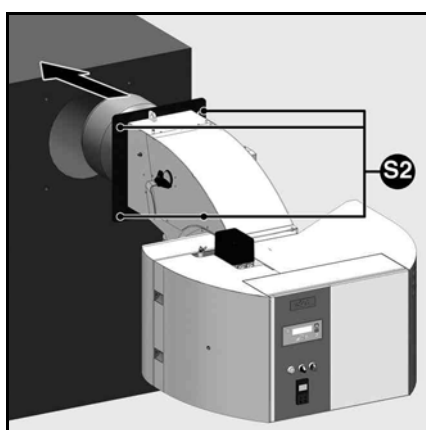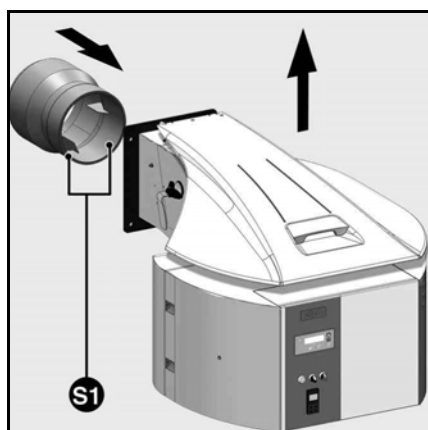

Burner assembly

- Take the burner tube (delivered in a separate box).
- Fit it on burner body.
- Remove cover.
- Tighten the 2 fixing screws **S1**.
- Lift the burner, using the 2 hoisting eyes **19** (see page 3) and fasten to the boiler.
- ⚠ Take care not to obstruct the furnace pressure take-off tube, **pF**.
- Tighten the 4 fixing screws **S2**.
- Place cover back on.

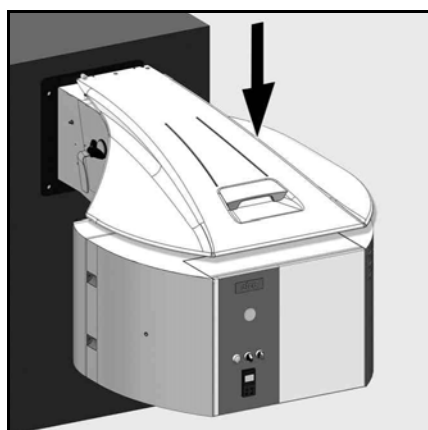

Gas connection

Gas connection

The gas lines and valves and instruments group should be installed and taken into operation in accordance with the applicable engineering standards and regulations.

The connection between the gas distribution network and the gas ramp must be done by authorised persons.

The section of the pipings must be calculated so that the loss of load doesn't exceed 5% of the distribution pressure.

A quarter turn manual valve (not supplied) must be provided for upstream of the gas ramp and the filter.

The filter must be installed on a horizontal nozzle with the cover in the vertical position to enable cleaning.

The threaded unions used must be in conformity with present standards (tapered male thread, straight female thread with sealing provided in the thread).

Provide for sufficient space to access the gas pressure switch adjustment.

Gas properties

Prior to any installation work make sure to obtain the following data from the gas supply company:

1. type of gas
2. calorific value $H_{un}=kW/m^3$ (kJ/m³)
3. maximum CO₂ content of exhaust gas
4. gas connection pressure and rest pressure

Type of gas test

Prior to mounting the burner to the gas feed line check the available type of gas and burner type against the data given on the burner nameplate (attached to burner). Be sure the description of the burner and the type of gas are the same as indicated on the nameplate.

Gas connection pressure

A minimum connection pressure must be available upstream of the burner gas valve to ensure the proper functioning of the burner.

For the installation of the valves and instruments group take care to observe the mounting instructions supplied by their manufacturers (these are packed with the equipment).

The gas line installed to the burner must be dimensioned in accordance with the throughput rate and the available pressure.

For selecting the nominal bore „DN“ of the gas valves and instruments group **care should be taken to observe the flue resistance of the boiler and the gas pressure loss of the burner and valves and instruments group.**

Caution!

The absence of impurities and foreign bodies must be checked before installation and commissioning of the gas ramp, the lever valves and unions.

Gas valves and instruments group

The gas valves and instruments group can be connected directly to the gas feed line. **Take care to observe the correct order of installation and direction of flow (arrow on housing).** Check the valves and instruments and connection pieces for absence of dirt particles and foreign matter before installation and initial operation. **To provide effective conditions for start-up make sure the distance between the burner and the gas stop valve is as short as possible.**

Leak test

The gas line upstream of the burner gas valves and instruments group must be installed in accordance with the applicable regulations, checked for absence of leaks, vented and certified accordingly by the gas installation company. The screwed unions and flanged joints must be checked for proper tightness (by making a pressure test). The leak test must be made under pressure using approved foaming agents which do not cause corrosion. For steam boiler furnaces the result of the leak test must be duly certified.

Venting

Caution! Prior to taking the burner into operation or after any repair work make sure to vent the complete gas feed line and the gas valves and instruments group into the open atmosphere (e.g. by means of a hose) taking care to avoid any hazards.

In no case should the gas line be vented into the heating or furnace chambers. Make use of a test burner to check the gas-carrying spaces are free from an inflammable gas mixture.

Support

The valves and instruments group must be supported with a telescopic jacking member or similar during and after installation (e.g. on filter and valve).

Joint


It is recommended to provide an easy-to-disconnect joint (with planar sealing faces) to facilitate repair work on the boiler (furnace) and allow the boiler door to be swivelled out if required.

Assembly

Gas manifold Pressure take-off pipes


Gas train assembly

- Check the correct position of the O-ring in the gas connecting flange.
- Secure the gas train on the burner head so that the gas train coils are in the upper vertical position.
- Pay attention to the direction of circulation.
- Connect the power cable to the gas train.

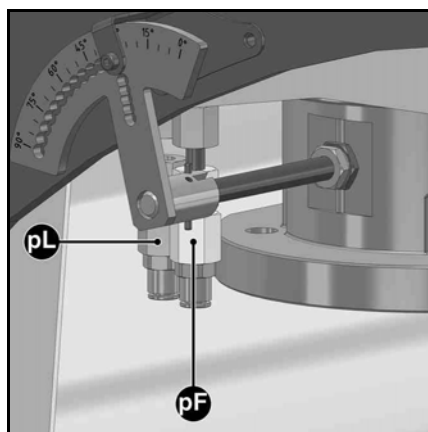



Connecting pressure take-off pipes pF and pL

- Connect the furnace pressure take-off tube **pL** on the burner body and the union **pL** on the gas train using the tube **pL** (blue), shorten the tube depending on the assembly scenario.
- Connect the furnace pressure take-off tube **pF** on the burner body and the union **pF** on the gas train using the tube **pF**, shorten the tube depending on the assembly scenario.
- Manually screw in the unions (max. 5Nm) and check tightness.

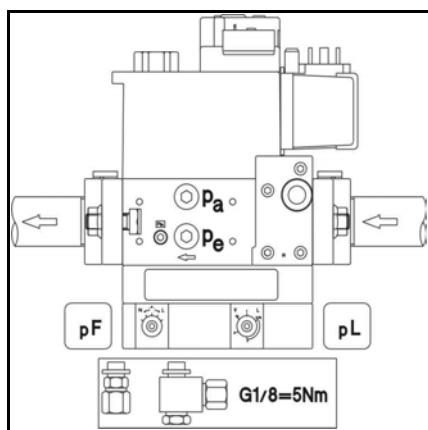




pBr (pG) = Gas pressure take-off tube
pF = Furnace pressure take-off tube
pL = Air pressure take-off tube

D = Setting screw (air surplus)
R = Setting screw (ratio Gas/Air)

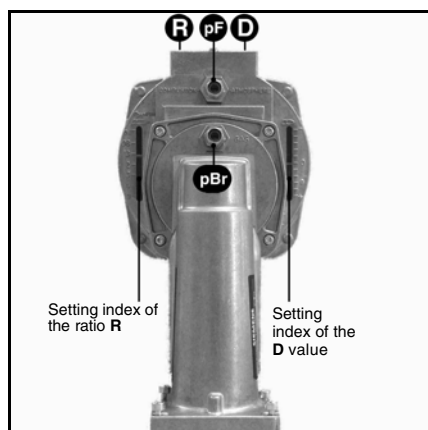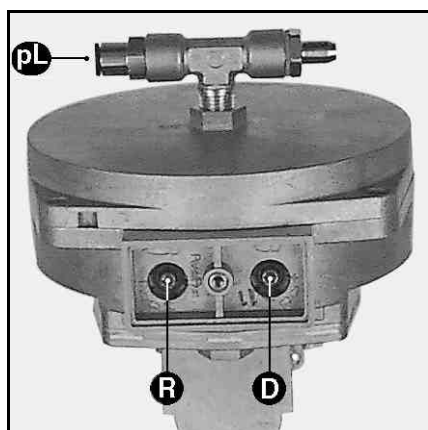

Assembly

Checking / assembling the combustion components

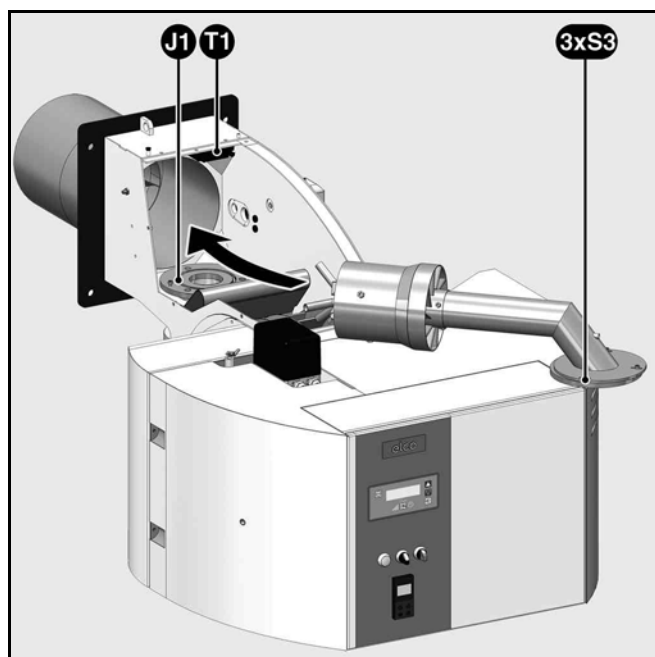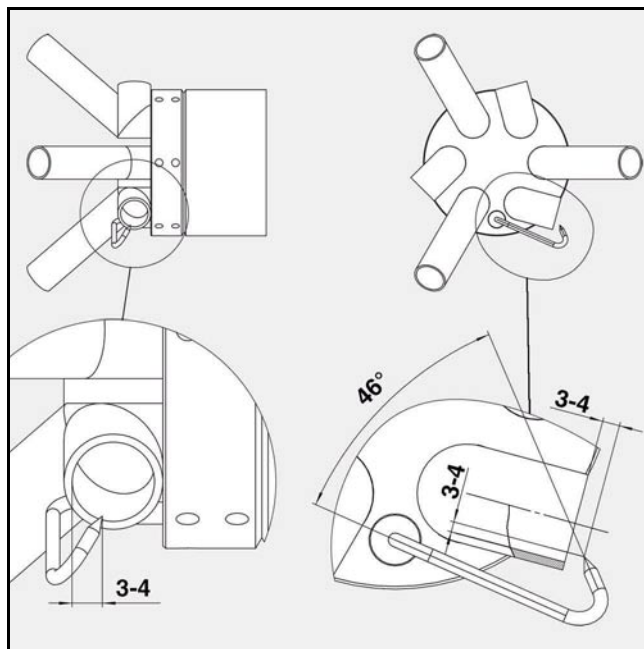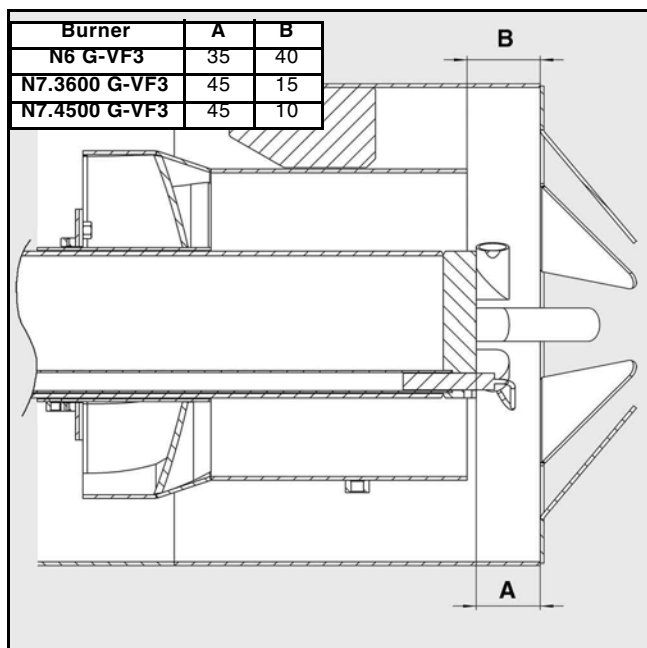

Assembling the combustion components

- Check that the O-Ring **J1** is in the correct position in the gas elbow.
- Check the adjustment settings of the ignition electrode as per the diagrams.
- Insert the combustion components into the head, tighten the mounting screws **S3**.
- Connect the ignition cable **ZK** on the combustion head.
- Connect the ignition cable **ZK** on the ignition transformer **T1**.

Important

If there is a change to the type of gas used, for example **H** or **E** natural gas (**G20**) to **L** or **LL** gas (**G25**) or vice versa, the burner settings should be completely overhauled.

It is not necessary to modify the combustion head in any way.

Assembly

Gas connection Electrical connection Checks before commissioning

General regulations applying to the gas connection

- The gas train must only be connected to the gas mains by a recognised specialist.
- The cross-section of the gas line should be of a size designed to guarantee that the gas flow pressure does not drop below the specified level.
- A manual shut-off valve (not supplied) must be fitted upstream of the gas train.
- In Germany, a thermally triggered shut-off valve (to be installed by the customer side) must be fitted as

specified by the draft combustion ordinance.

It is the responsibility of the fitter or his representative to obtain approval for the system at the same time as the burner is commissioned. Only the fitter or his representative can guarantee that the system meets applicable standards and regulations. The fitter should be in possession of the corresponding official permit, and should carry out the corresponding sealing tests and purge the system of air.

All electrical installation and connection work must only be carried out by a suitably qualified electrician.

The applicable guidelines and directives must be observed, as well as the electrical circuit diagram supplied with the burner!



Electrical connection

- Check to ensure that the power supply is as specified (230V, 50 Hz single phase with neutral and earth)

Boiler fuse: 10 A

Electrical connection

It must be possible to disconnect the burner from the mains using an omnipolar shutdown device complying with the standards in force.

Burner motor connection

The burner is delivered for a power supply of 400V - 50Hz of triphase current with neutral and earth. Connect the burner motor cable to the terminals in the electrical cabinet. Check the direction of rotation of the ventilation motor manually with the burner contactor.

Connecting the gas train

Connect the gas train to the plugs on the burner.

Checks before commissioning

The following must be checked before initial commissioning:

- That the burner is assembled in accordance with the instructions given here.
- That the burner is pre-set in accordance with the values in the adjustment table.
- Setting the combustion components.
- The heat generator must be ready for operation, and the operating regulations for the heat generator must be observed.
- All electrical connections must be correct.
- The heat generator and heating

system must be filled with water and the circulating pumps must be in operation.

- The temperature regulator, pressure regulator, low water detectors and any other safety or limiting devices that might be fitted must be connected and operational.
- The exhaust gas duct must be unobstructed and the secondary air system, if available, must be operational.
- An adequate supply of fresh air must be guaranteed.
- The heat request must be available.
- Sufficient gas pressure must be available.


- The fuel supply lines must be assembled correctly, checked for leaks and bled.
- A standard-compliant measuring point must be available, the exhaust gas duct up to the measuring point must be free of leaks to prevent anomalies in the measurement results.

Commissioning

Working cycle test

Firing

Safety unit settings and checks

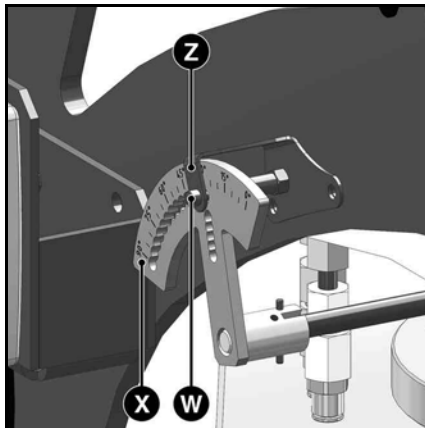

Important!
Before firing, to ensure the gas train operates correctly, the position of the gas flap must be checked. The table below shows the recommended setting depending on the burner.

Burner	Setting (°)
N6.2400 G-VF3	90
N6.2900 G-VF3	90
N7.3600 G-VF3	90
N7.4500 G-VF3	90

- If a correction is necessary, proceed as follows:
- Loosen screw **S**.
- Manually move lever **H** to the recommended position (setting according to the table above).
- Lock into position using screw **S** on the housing mounting bracket.

Pre-setting the SKP 75 according to the table below: (these values are given as a guide only)

Burner	Gas pressure [mbar]	Shift from origin (screw D)	Pressure ratio (screw R)
N6.2400 G-VF3	90	2,9...4,0	2,2...2,3
N6.2900 G-VF3	90	2,9...3,7	2,2...2,3
N7.3600 G-VF3	90		
N7.4500 G-VF3	90		

Pre-setting the pressure switches on the burner and the gas train

See the "Commissioning, Gas pressure switch/air pressure switch" section.

Checking the operating sequence

- Open the quarter-turn hand-operated fuel valve, then immediately close it again.
 - Switch the burner on.
 - Select manual operation mode on the control cabinet.
 - Close the thermostatic circuit.
- The VPS 504 S02 leak tightness test device is switched on. After 30 s if the test is validated, the amber light will come on. The control unit is now powered on.
- The program should function in the following way:
- Air flap opens to the servomotor nominal output position,

- Pre-ventilation,
- Return to ignition position,
- Ignition of electrodes,
- Valves open,
- Burner stops due to lack of gas pressure or control unit locks because flame is extinguished.
- If unsure, redo the above test.





The unit can only be fired once this very important operating sequence check has been performed.

Firing

Warning:
The burner may be only fired when all the requirements listed in previous sections have been met.

- Open the quarter-turn hand-operated fuel valve.
 - Close the thermostatic circuit.
- The leak tester is charged. After running the test (30 s), the control unit programme will relaunch. After pre-ventilation, the burner comes on and operates at minimum power.
- Check the following:
 - the combustion
 - the overall leak tightness of the gas train using foam designed for this purpose.

No leaks should be detected.

- Measure the gas flow shown on the counter.
- Slowly increase the power to nominal output, controlling the combustion throughout. If necessary, adjust the combustion by adjusting the Pair:Pgas pressure ratio (, Screw **R**).
- Adjust the servomotor control cam **I** (Nominal output) to limit the maximum opening of the air flap to the position reached for nominal output.
- Slowly reduce the power to the nominal output required, checking the combustion values throughout; if necessary, at minimum power, adjust the combustion via parallel shifting of the characteristic (, Screw **D**).
- Adjust servomotor control cam **III** (Minimum output) to limit the minimum opening of the air flap possible during operation to the position reached for minimum output.
- **Precautions:** On principle, the nominal output must only be modified by adjusting the Pair:Pgas pressure ratio (, Screw **R**), and the minimum output must only be modified by offsetting in parallel to the characteristic e (, Screw **D**).
- After any modification to the minimum output settings, check the combustion at nominal output and adjust if necessary.
- After any modification to the nominal output settings, check the combustion at minimum output and adjust if necessary.
- To complete the adjustment process, restart the burner and check the

power and the combustion. If necessary carry out adjustments as described above.

- Check the leaktightness of the gas train.
- No leakage should be detected.
- Check the safety devices.
- Setting and checking the safety devices

Gas pressure switch

- Set it to the minimum distribution pressure.
- The burner operates at minimum output.
- Slowly close the 90° manual shut-off valve.
- The burner must stop due to a lack of gas pressure.
- Open the 90° manual shut-off valve.
- The burner restarts automatically.
- The pressure switch is set.
- Fix and screw on the cover.

Air pressure switch

- See the paragraph entitled "Determining the differential pre-ventilation pressure and setting the differential pressure switch" (page 16).

Leak testing device VPS:

- Open **pa** on the device.
 - Restart the burner. After 30s the tester should enter safety mode (red light on).
 - Reclose **pa**.
 - o Unlock the tester safety catch by pressing the red indicator.
- The test cycle is relaunched. The burner will be working.
- Check the leaktightness.
 - Disconnect the measurement devices.
 - Re-close the pressure tap.
 - Reset the unit.
- The burner will be working.
- Check:
 - the seal between the flange and the boiler front,
 - the opening of the control circuit (limiter and safety),
 - the current on the motor relay.
 - Check the combustion under actual working conditions (doors closed, cover in place, etc.) and check all circuits for possible leaks.
 - Establish a measurement protocol.
 - Start-up automatic operation.
 - Provide all the data required for proper operation. (Inform the boiler room operator).
 - Place the boiler plate in a visible location.

Actuator Limit switch setting


Important

Once the pressure switches have been set, they must be protected to prevent settings from being altered. For example, this can be done by placing a spot of varnish on at least one of the screws on the equipment's protective cover.

Once the burner has started up, its safety systems must be checked to ensure they are operating correctly. Likewise, following start-up, it is necessary to check that the boiler's safety chain is operating correctly in accordance with the regulations in force. This check must be carried out with the user's agreement.

Technical data SQM actuator

Voltage	230 V -15%
	50 / 60 Hz
	240 V +10%
	50 / 60 Hz
Power input	9 VA
Max. contact load	250 V 10 (3) A
Mounting position	as required
Ambient temperature	-20°C + 50°C
Protection classification	IP 54, DIN 40050
Weight	1,7 kg
	SQM10/11 SQM20/21
Running time at 130° turning angle	42 Sec. 66 Sec.
Torque	10 Nm 20 Nm

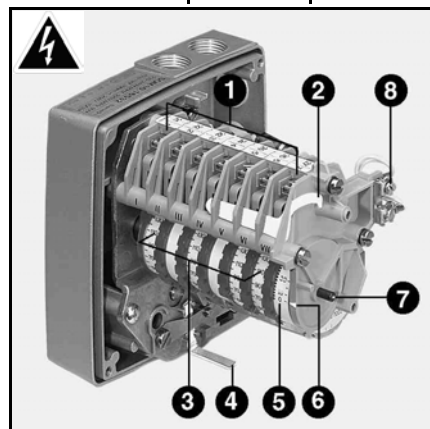

Positions

- 1 Terminals
- 2 Cam setting key
- 3 Scales for switching point setting
- 4 Rocker arm for uncoupling
- 5 Scale for actuator position
- 6 Actuator position indicator
- 7 Shaft end to fit a return potentiometer
- 8 Power supply

Description

The SQM actuator is intended for use with two-stage sliding or modulating oil, gas or dual-fuel burners. The reversible actuator is fitted with a synchronous motor which drives a shaft via a gearbox. The shaft end carries a coupling to drive the fuel and combustion air controlling element. The SQM actuator has been designed for dual-wire control by controller or switching units with change-over contacts. Potentiometers can be installed for a range of applications on customer's request. The 60 Hz frequency will reduce the running times by approx. 17 %.

Limit switch factory setting

Description	Pre setting	Function
I		Max. power (air and gas)
II	0°	Closed flaps (air and gas)
III		Firing air flow
IV	-	Not used
V	-	Cam V gives minimum regulation info; must be set between values of cam I and VI
VI		Set minimum air flow-rate
VII		Simultaneous switch-on of nominal flow indicator and hour counter (only for operation hours below nominal flow rate) Set a few degrees below the regulation flow-rate value of Cam I.



Cam VI controls minimum automatic flow-rate following ignition. If not requested, the flow remains unchanged. The time-delay unit K6 in the control cabinet must be set at ≈ 15 s.

The limit and auxiliary switches are set by means of manually adjustable latching cam plates. Scales are fitted between the disks to facilitate the selection of the switching points. The cam plates are provided with a small pointer for indicating the switching point of a scale between the setting ranges. An additional scale fitted to the end of the cam roller serves to indicate the position of the actuator.

The drive unit may be disconnected from the controlling element by changing over a rocker arm mounted to the gearbox. This will allow any desired position of the controller plate to be selected by hand.

Drive and output will be coupled in the vertical position of the rocker arm.

Sensor

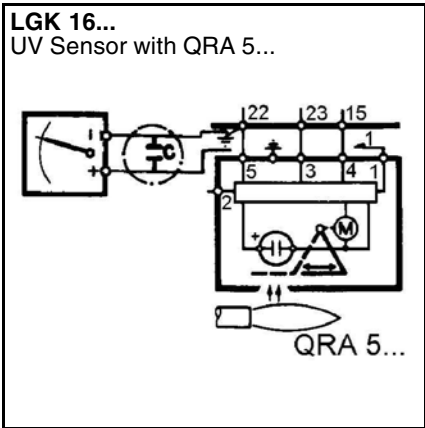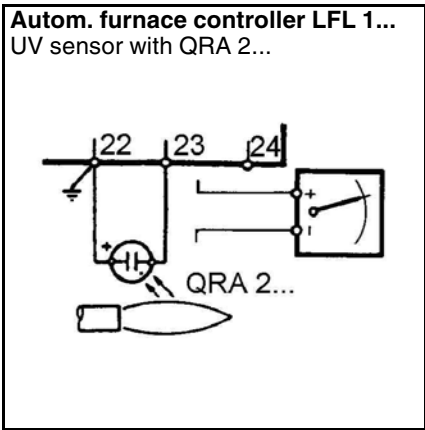

Flame monitor with UV sensor
The UV radiation of hot flame gases is utilized for generating the flame signal. The radiation detector used is a UVsensitive tube with two electrodes and being live all the time. This UV tube will ignite when subject to light from the 190-270 nm range of the spectrum and thus cause a current to flow to the flame signal amplifier.
The UV tube will not respond to the after-glowing refractory lining of the furnace, sunlight, daylight or light of the boiler room lighting system.
The service life of the UV tube is about 10,000 hours at ambient temperatures up to 50°C; higher ambient temperatures will considerably reduce its service life.

Burners operated continuously or intermittently for more than 24 hours without interruption (e.g. boiler sequence control) or burners operated on steam boilers must be equipped with the automatic furnace controller of type LGK 16... and its associated self-controlling flame monitoring circuit (QRA 5...).

UV current measurement with QRA 5
For an accurate UV current measurement it is recommended to make use of the tester KF 8832. If a normal meter (microammeter) is used for UV current measurement it is advisable to make the measurement as shown in the figure. For this, a capacitor $C = 470 \mu F, 15V$ (or with higher electric strength) must be integrated in the measuring circuit.
Meter: $100 \mu A/R_i = 3 k\Omega$.
Connect the meter between the automatic furnace controller and the UV flame sensor QRA 5... (terminal 22 (-) and 5 (+)).
Take care to observe the right polarity.

Alignment of the UV sensor QRA 5...
The mounting flange is movable supported on the sensor tube to allow the exact alignment of the sensor window relative to the direction of incidence of the UV radiation.

NOTE: The terminal (22) must be connected to earth all the time.
Cleaning the sensor
Check the UV sensor window for possible accumulation of dirt at regular intervals and clean if required. Take care the sensor window is free of dust all the time.
If upon cleaning the sensor does not properly work it will be required to replace it by a new one.


Automatic controller	Minimum required	Maximum possible
Monitor	with UV	with UV
* LFL 1...	70 μA	630 μA
* LGK 16...	**	**
Recommended instrument range: UV monitor 0 - 1000 μA		

Sensor currents

* See technical data for automatic furnace controller LFL 1.../ LGK 16...
* See data on unit KF 8832 for sensor current measurement.

Commissioning

Gas pressure switch Air pressure switch

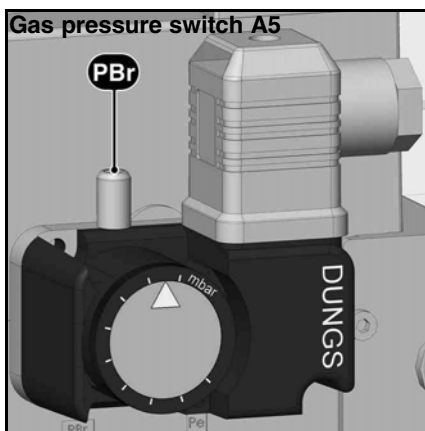

Gas pressure switch GW...A5/A6

The gas pressure switch is designed to monitor the gas flow pressure. It can be used for monitoring either falling pressure (minimum) or rising pressure (maximum, specified for equipment according to TRD 604). The types GW...A5/A6 may be used as pressure switches of specific design according to VdTÜV Leaflet "Pressure 100/1" for application in furnace systems complying with TRD 604. The setpoint (switching point) may be selected by means of a setting disk with scale.

Technical data:

Type of gas:
Gases according to DVGW Worksheet G 260/1, gas families 1, 2, 3

Degree of protection: IP 54

Ambient temperature: -15°C to +50°C

Mounting position: any

Operating pressure up to:

GW 50/150 A5/A6	500 mbar
GW 500/ A5/A6	600 mbar



Setting the min. gas pressure switch

- Remove the protective cover.
- At the rated output, measure the gas flow pressure and calculate the switch-off pressure by reducing by approximately 20%.
- Adjust the graduated disc to the desired switch-off pressure opposite the arrow (the graduations are approximate values).
- Operate the burner at minimum power.
- Close the gas cut-off valve slowly to obtain the desired switch-off pressure.
- Turn the graduated disc until the burner switches off.
- Refit and screw down the protective cover.

Max. gas pressure switch

- Remove the protective cover.
- At the rated output, measure the gas flow pressure and calculate the switch-off pressure by increasing by approximately 20% (no more than 30% under any circumstances).
- Adjust the graduated disc to the desired switch-off pressure opposite the arrow (the graduations are approximate values).
- Operate the burner at minimum power. If the max. gas pressure switch switches off the burner, increase the adjustment value but not to more than 130% of the flow pressure at the rated output.



Air pressure switch

The air pressure switch is provided for monitoring the pressure of the combustion air fan.


The pressure switch „Dungs“ LGW... has been designed for switching on, off or over an electric circuit in the case of changes of the actual pressure levels from the setpoint setting. The pressure switch LGW... can be used as overpressure, vacuum or differential pressure monitor for air and non-aggressive gases but not for gases according to DVGW Worksheet G 260/l.

Certification

The pressure switch has been tested in accordance with DIN 3398 Part 2 and is registered by CE/DIN-DVGW. It has been registered in other important gas consumption countries.

Important

Once the pressure switches have been set, they must be protected to prevent settings from being altered. For example, this can be done by placing a spot of varnish on at least one of the screws on the equipment's protective cover.

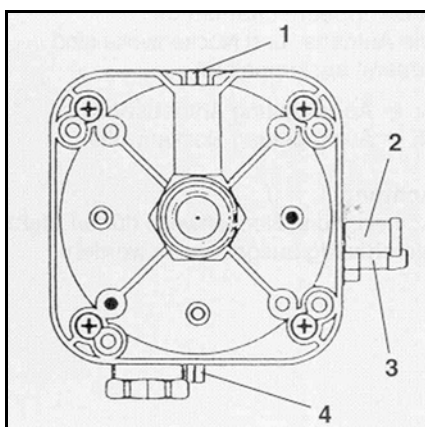

Determining the differential pre-flushing pressure and adjusting the differential pressure switch

- Burner in the pre-aeration phase.
- Measure pressure on test connection (2).
- Measure vacuum on test connection (3).
- Add the measured pressures.
- Set the scale to 90% of the calculated value.

Switch function test

- Test buttons are provided to check the switch functions for proper operation (with safety cut-out and interlock). The burner is normally run in partial-load condition when testing the safety functions. On pressing button (4) the vacuum will be removed which causes the differential pressure to drop below the required level. If it is necessary to test the pressure switch functions under full-load conditions this may be done by pressing button (1).

Description

Gas valves and instruments group type VGD
Technical data:
Types of gas:
Gas types of gas families 1, 2 and 3 according to DVGW Worksheet G 260/1
Max. inlet pressure: 500 mbar
Electrical connection: 230-240V, 50Hz
Protection classification: IP 54
Ambient temperature: -15°C to +50°C

Specifications for the design, construction and safety features of gas furnace systems in heating installations are contained in DIN 4756 and TRD 412. Heating installations with higher operating pressures are subject to the DVGW Worksheets G 460 and G 461. The gas pipes must meet the specifications of DVGW-TRGI in the case of installations with operating pressures up to 100 mbar or higher than 100 mbar.

Gas connection pressure

To ensure the proper functioning of the burner, a minimum connection pressure must be available.

The gas feed pipe to the burner must be dimensioned according to the throughput rate and the available pressure.

The nominal bore (DN) of the gas valves and instruments group must be selected on the basis of **the resistance of the boiler on its flue-gas side and the gas pressure loss of the burner and valves and instruments group.**

Gas valves and instruments group

The gas valves and instruments group may be connected directly to the gas supply line. **Care should be taken to install the valves and instruments in the specified order and according to the**

direction of flow (arrow on housing).

Prior to installation and operation, check the valves and instruments and the connecting elements for possible accumulated dirt particles and foreign matter. **To ensure proper conditions for start-up, the distance between the burner and the gas shut-off valve must be as low as possible.**

On completion of installation the gas valves and instruments group must be subjected to a leak test in accordance with DVGW Worksheet G 600 and G 490 in the furnace system.

Description

The gas valves and instruments groups type VGD (screwed and flanged valves) are provided for gas supply, main shut-off, gas filtration and gas supply pressure control and monitoring. They can be used for all types of gases in the gas families 1, 2 and 3 according to Worksheet G 260/1. The valves and instruments groups are constructed as specified by EN 676 and DIN 4788, Part 2. All functional parts have been checked by individual tests and approved by a CE and DIN-DVGW registration number.

A detailed description of the valves and instruments used is contained in the Technical Datasheet for the Gas Valves and Instruments Groups Type VGD.

The premounted gas valves and instruments group is subjected to a leak test at the manufacturer's works.

For the installation and start-up of the gas pipes take care to observe the rules and regulations set forth by DVGW, especially DVGW-TRGI and TRF.

Gas valves and instruments groups

Basic construction

The burner's scope of delivery may include a gas train. In this case, the burner and the gas train are issued with a CE Declaration of Conformity. If the gas train is not delivered with the burner, the conformity of the burner is valid only if the gas fittings and instruments and the design of the gas train satisfy the burner test specified by EN 676 and meet the Pressure Equipment Directive. Individual testing will be necessary where this is not the case. The gas train delivered has its own documentation including operating instructions and a spare parts list. There follows a general description of the gas train.

Gas trains with a double valve are intended for the supply, main shut-off, gas filtration, gas pressure regulation and monitoring of the gas supply. They are compatible for use with gases conforming to the specifications of the gas fittings and instruments. They are built in accordance with EN 676. All function parts have been individually tested and awarded the CE marking and number of the Notified Body. The preassembled gas train is checked for leaks in the factory.

Low- and high-pressure gas trains

If the outlet side of the regulator, i.e. individual fittings and instruments downstream of the gas pressure regulator, has not been designed to be compatible with the maximum supply pressure that occurs in the event of a fault, the gas train must be equipped with a safety shut-off valve (SSV) and a safety relief valve (SRV) in accordance with EN 676. This equipment is generally required for maximum supply pressures of >360 mbar and > 500 mbar respectively. These are known as highpressure gas trains.

If all fittings and instruments of the gas train have been designed/approved for the maximum supply pressure that occurs in the event of a fault, the gas train is known as a low-pressure gas train. This is the case, depending on component selection, for maximum supply pressures of 360 and 500 mbar.

Gas valves and instruments group


The gas trains must be dimensioned to suit the throughput required and the available gas pressure. The gas valves and instruments group is defined on a system-specific basis.

The following must be taken into consideration:

- Burner output,
- Combustion chamber counterpressure,

- Gas pressure loss in the burner head,
- Gas pressure losses in the gas fittings and instruments.

The total drop in gas pressure must always be lower than the available gas flow pressure.

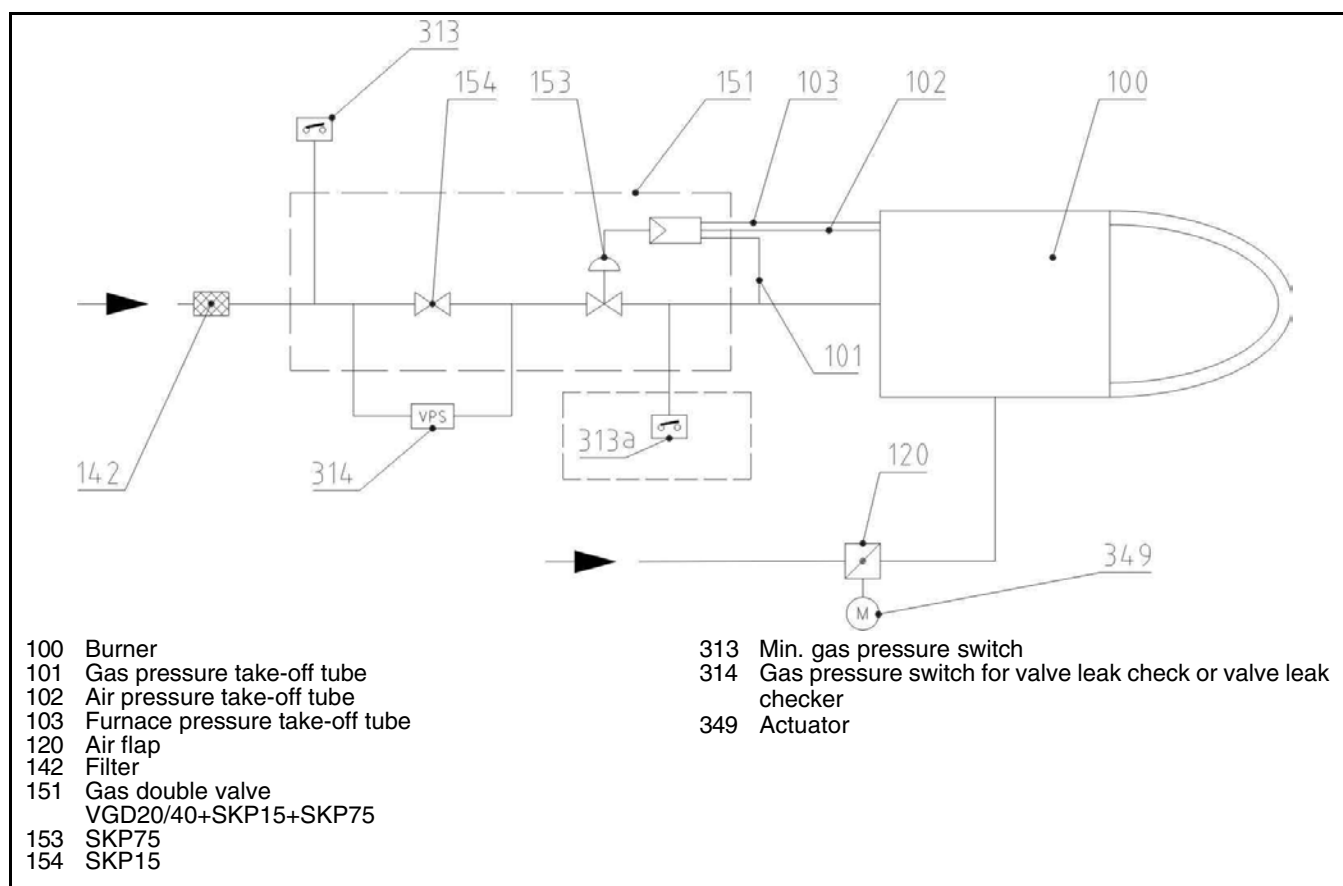

Basic construction

Installation and mounting of the gas filter

The gas filter may be installed in any desired position. Take care only to observe the direction of flow of the gas (arrow on filter housing). Make sure there is adequate clearance to facilitate the removal of the cover and replacement of the filter cartridge.

Filter replacement


The filter cartridge should be replaced by a new one as soon as a high pressure drop is noticed. If a new filter cartridge is not at hand it will be possible to wash the filter mat in 40°C water adding some light-duty detergent. Allow the mat to dry before reinstallation.

NOTE: For the installation of the filter mat take care to observe the marking or sticker.



Test burner


Depending on the country-specific requirements, when installing steam boilers it may be necessary to fit a test burner to the gas train (e.g. in line with directive TRD 412). This is used to vent the gas pipes. The gas supply is switched on by pressing the button (1). The flow of gas brings in the required amount of combustion air via the hole in the body (3). The gas/air mixture is routed towards the burner head (4) and ignited manually at its opening. Gas is supplied for as long as the button is pressed and cut off when it is released.

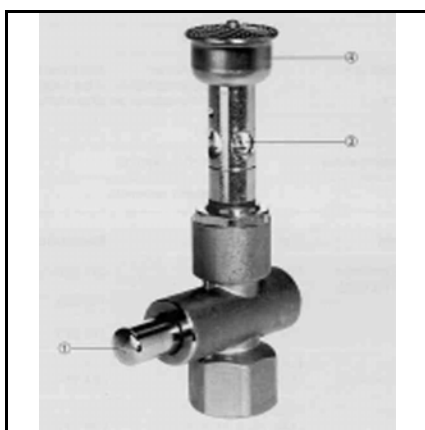

Technical features:

- Types of gas:
Gas in accordance with sheet G 260/1 of the DVGW, gas families 1, 2, 3
- Ambient temperature: -15°C to +70°C
- Assembly position: vertical, facing upwards
- Operating pressure up to: 500 mbar

Gas valve leakage controller

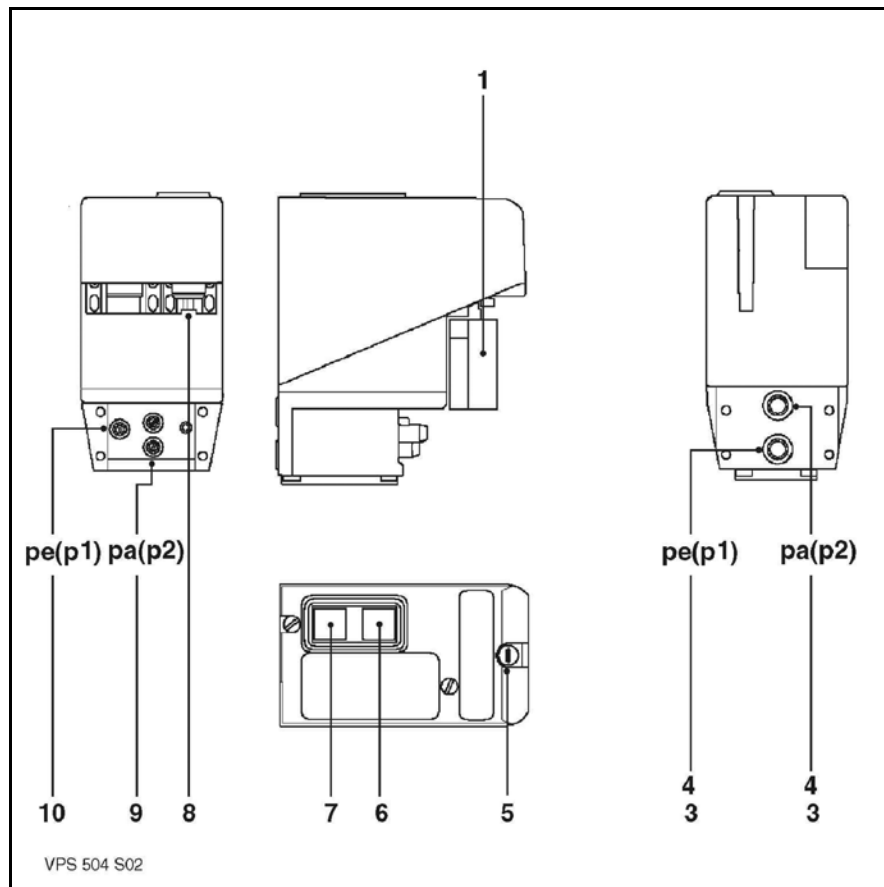

- 1 Wieland 7P socket
- 3 Filter element
- 4 O-ring Ø10.5x2.25
- 5 Fuse T6.3 250V Ø 5x20
- 6 Yellow indicator On :
Leakage test OK
- 7 Red indicator On :
Leakage test NOK
Manual clear
- 8 Spare fuses
- 9 **pa** (p2) pressure take-off Ø 9
pe + 20mbar
- 10 **pe** (p1) pressure take-off Ø 9
inlet pressure (distribution)

Leakage controller VPS 504 S02

Working principle :

Prior to each burner start-up, the controller checks for possible leaks between safety and main valves by increasing distribution pressure. Electrically, the leakage controller is serially connected between the thermostatic circuit and burner control and safety unit.

Installation :

Directly on valve.

Program stages :

On stoppage, safety and main valves are closed.

On thermostat stoppage, the leakage controller is turned on and booster increases distribution pressure by 20mbar.

After no more than 30 seconds operation :

- If leakage test is OK; yellow light comes on and current is released to feed the burner's control and safety unit, which then starts its cycle.
- If leakage test is NOK; red light comes on and no power is fed to the control and safety unit.

Control cycles have to be restarted manually. Change valve if defect persists.

Setting :

The controller requires no on-site setting.

Working test :

While controller is working :

- Open **pa** pressure take-off. Leak caused prevents superpressure from building up and safety unit locks after 30 seconds.
- Reclose **pa** pressure take-off.
- Release controller safety by pressing red indicator light.

Leakage test restarts and, after 30 seconds, yellow indicator lights up and powers up the control and safety unit, which begins its cycle.

Maintenance

Burner and boiler servicing must only be carried out by a professionally qualified heating engineer. The system operator is advised to take out a maintenance contract to guarantee regular servicing. Depending on the type of installation, shorter maintenance intervals may be necessary.



1. Turn off the power supply and protect the system from accidental start-up.
2. Cut the gas supply.
3. Make sure there is no residual power in the system and that the actions in points 1 and 2 have been completed.
4. Before opening the burner casing, ensure that the fan motor has stopped completely.

Failure to observe any of these instructions will result in the risk of death or injury!

- Use original spare parts.



Work recommended as part of annual burner maintenance:

- Burner test run, input measurement in the boiler room
- Clean the combustion components and replace defective parts if necessary
- Clean the fan wheel and the blower
- Clean the gas filter; replace it if necessary
- Visual inspection of the burner's electrical components; eliminate malfunctions if necessary
- Check burner start characteristics
- Leakage test
- Burner safety devices function check (air pressure/gas pressure switches)

- Flame monitor and automatic combustion control unit function check
- Commissioning the burner
- Check the gas flow
- Correct the adjustment values if necessary
- Draw up a measurement report

General checks

- Emergency stop button function check
- Visual inspection of gas lines in the boiler room

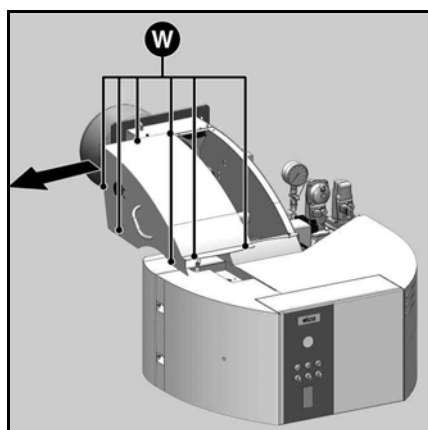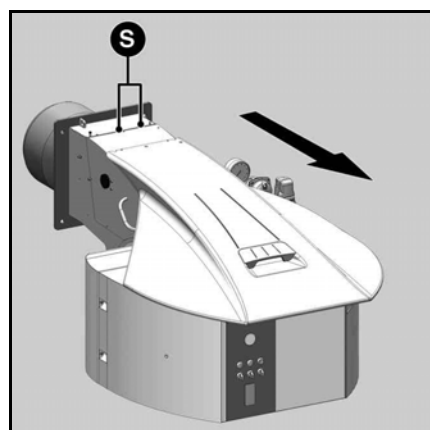


Checking the combustion components

- Loosen the 2 screws **S** to remove the burner hood.
- Remove the 7 screws **W** to remove the combustion components access cover.
- Remove the combustion components.
- Check the ignition electrodes and the ignition cable; replace if necessary.
- Clean the baffle plate.
- Check adjustments and settings during assembly.

Cleaning the fan

- Disconnect the motor by unplugging it from the power supply.
- Remove the motor.
- Thoroughly clean the fan.
- Do not use pressurised materials.
- Reassemble.

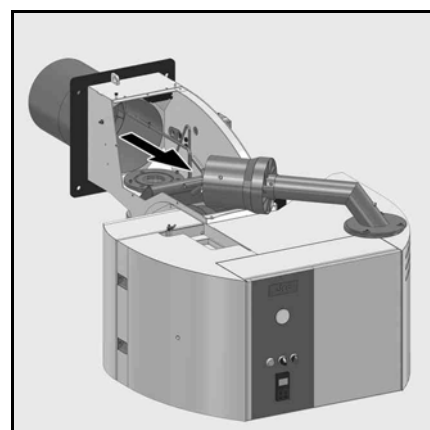

Maintenance

Filter replacement

- The filter element of the must be checked at least once a year and replaced if clogged.
- Loosen the screws of the filter cap.
- Remove the filter element and clean its housing.
- Do not use any pressurised cleaning products.
- Replace the filter element with a new element.
- Screw the cover back into place.
- Reopen the manual shut-off valve.
- Check it is airtight.
- Check the combustion values.

Cleaning the cover

- Do not use abrasive products or products containing chlorine.
- Clean the cover with water and a suitable cleaning product.
- Refit the cover.



Precautions

After any operation: check the combustion performance under real operating conditions (doors shut, cover fitted etc.). Record the results in the relevant documents.

Important

Once the pressure switches have been set, they must be protected to prevent settings from being altered. For example, this can be done by placing a spot of varnish on at least one of the screws on the equipment's protective cover.

Following maintenance on the burner, and after its safety system settings have been modified (e.g. the pressure switches), the burner's safety systems must be checked to ensure they are operating correctly. Likewise, following burner maintenance, it is necessary to check that the boiler's safety chain is operating correctly in accordance with the regulations in force. This check must be carried out with the user's agreement.

Checking the flue gas temperature

- Check the flue gas temperature at regular intervals.
- Clean the boiler if the flue gas temperature is more than 30 °C above the value measured at the time of commissioning.
- Use a flue gas temperature gauge to make the check easier.

Exhaust gas test Trouble shooting instructions

Exhaust gas loss

Exhaust gas loss by way of free heat will occur as a result of the temperature difference between the fuel-air mixture entering the furnace chamber and the gases discharged. Any increase in the excess of air and the resultant higher exhaust gas volume will cause the exhaust gas loss to rise. The exhaust gas loss can be calculated as follows:

$$q_A = (t_A - t_L) \cdot \left(\frac{A_1}{C O_2} + B \right)$$

q_A = exhaust gas loss in %

t_A = exhaust gas temperature in °C

t_L = combustion air temperature in °C

CO_2 = volumetric content of carbon dioxide in %

O_2 = volumetric content of oxygen in %

	Natural gas	Town gas	L.P.G.
$A_1 =$	0,370	0,350	0,420
$B =$	0,009	0,011	0,008

Example:

Data measured in natural gas mode:

CO_2 content of exhaust gases 10,8%

Exhaust gas temperature 195°C

Air intake temperature 22°C

The exhaust gas loss can be calculated as follows:

$$q_{Af} = (195-22) \left(\frac{0,37}{10,8} + 0,009 \right) = 7,48 \% \quad q_{Af} = (195-22) \left(\frac{0,49}{12,8} + 0,007 \right) = 7,83 \%$$

In any case of trouble proceed with checking the basic conditions for a proper operation of the boiler system:

1. Is electric power available?
2. Is there any gas pressure?
3. Are the shut-off valves opened?
4. Are all control and safety instruments such as boiler thermostat, water supply failure cut-out, limit switches, etc. properly set?

1. Ignition failure

Cause	Remedy
Ignition electrode short circuit.	Adjust electrodes.
Wide ignition electrode spacing.	Adjust electrodes.
Dirty and wet electrodes.	Clean electrodes.
Cracked insulator.	Replace insulator.
Defective ignition transformer.	Replace transformer.
Defective automatic furnace controller.	Replace controller.
Burnt ignition cable.	Replace cable; search for cause and eliminate.

Pilot burner failure.

Adjust ignition gas pressure

Ignition gas valve does not open.

Search for cause and eliminate

Defective solenoid.

Replace

2. Motor running failure

Cause	Remedy
Motor protection relay and fuses.	Check and replace if required.
Air pressure switch not changed over or defective.	Check and replace if required.
Defective motor.	Replace motor.
Defective power contactor.	Replace contactor.
Air fan motor starts but stops after 20-25 secs.	Check for solenoid leaks
Air fan motor starts, but stops after about 10 secs in pre-ventilating mode.	Air pressure switch fails to change over; replace switch if defective; clean switch if dirt has accumulated; check electrical connections.

3. No response to flame by automatic furnace controller with flame sensor

Cause	Remedy
Dirty flame sensor.	Clean flame sensor.
Burner fails to start.	Check connection of automatic furnace controller.
Trouble lamp lights; flame trouble.	Unlock and search for cause
Ionisation current too weak.	Check combustion setting.
Burner starts without flame formation. Solenoid valve fails to open.	Defective coil or rectifier. Check connection.
Lack of gas or gas pressure too low.	Check gas pressure controller, gas valve, gas filter. Is the equipment gas cock open?

Exhaust gas test Trouble shooting instructions

4. Mixing unit gives poor combustion data

Cause	Remedy
Incorrect settings.	Correct settings.
Incorrect mixture ignition unit.	Replace unit.
High or low combustion air flow rate.	Readjust burner.
Furnace chamber not sufficiently ventilated.	Furnace chamber to be ventilated through a non-closed opening with a cross section of min. 50 % of all chimney cross sections of the furnace system. Take care to observe the application regulations.

5. Solenoid valve fails to open

Cause	Remedy
Defective coil or SKP actuator.	Replace coil or SKP actuator.
Defective automatic furnace controller.	Replace automatic furnace controller.
Valve does not close tightly; dirt accumulated on sealing surfaces.	Open valve; remove foreign matter; replace valve if required.

6. Cleaning and lubricating instructions

Depending on the amount of dirt introduced by the combustion air it will be necessary to clean the fan impeller, ignition electrodes, flame sensors and air dampers as required.

For burner with mechanical compound controller:
Lubricate the compound controller setting screws with grease.

The bearing points of the burner moving parts require no maintenance. Damages of ball bearings should be detected and eliminated at an early stage to avoid greater subsequent trouble. Listen to the motor bearing noise to identify possible irregularities.

Operating trouble

In case of operating trouble it should be checked whether the system is in proper working order.

Make a check for the following:

1. Availability of fuel. Availability of gas in the line at sufficiently high pressure. Availability of fuel oil in the tank (for dual fuel burner). Correct position of fuel selector switch.
2. Availability of electric power in the burner system.

3. Proper functional order and setting of all control and safety instruments such as temperature controller, safety limiter, water failure cut-out, electrical limit switches, etc. If the trouble is not found to be due to any of the above-mentioned points it will be necessary to test the burner functions very carefully.

Prevailing conditions:

The burner will be found to be out of operation and in faulty and interlocked position.

Proceed with searching for the cause of the trouble and eliminate it. Unlock the automatic furnace controller by pressing the fault eliminate key and start the burner.

Do not press the fault eliminate key longer than 10 seconds.

The start-up program will be initiated and should be carefully monitored. The possible cause of the fault may be quickly found by reference to the fault indicator of the automatic furnace controller and watching the start-up and operating program.

Control program in the case of trouble and fault indicator LFL 1.../LGK...



LFL 1.../LGK ...

a - b Starting program.

b-b' In a number of time versions; idle steps of the program unit to self-stop after burner start-up (b' = operating position of program unit).

b(b')-a After-flushing program after regular stop. In the starting position „a“ the program unit will automatically stop or initiate an immediate restart of the burner, e.g. after a fault has been eliminated.

- Duration of the safety period for single-tube burners.
- Duration of the safety period for burners with ignition gas valve.

Basically, any type of trouble will result in the immediate stop of the fuel supply. At the same time, the program unit and consequently the fault indicator will stop. The type of trouble can be identified by the symbol opposite to the reading mark of the indicator:

◀ **No start**, e.g. because the „CLOSED“ signal from the „Air Damper CLOSED“ limit switch is missing or a contact is not closed between terminals (12) and (4) or (4) and (5); or the contacts of all control and safety units in the controlled system are not closed (e.g. gas pressure or air pressure switches, temperature or pressure regulators).

▲ **Operating stop** because the „OPEN“ signal from the „Air Damper OPEN“ limit switch is missing. Check and adjust the limit switch concerned.

◆ **Shut-off on trouble because there is not air pressure** signal at the beginning of the air pressure check. **Any air pressure failure after this time will also lead to a shut-off on trouble.**

■ **Shut-off on trouble** because of a fault in the flame monitoring circuit.

▼ **Operating stop** because the position signal of the „Partial Load“ limit switch (air damper in „Partial Load“ position) is not available on terminal (8). Check and adjust the limit switch concerned.

1 **Shut-off on trouble** because a flame signal is not available on the expiry of the (1st) safety time.

Any failure of the flame signal on the expiry of the safety time will also lead to a shut-off on trouble.

2 **Shut-off on trouble** because the flame signal has not occurred on the expiry of the (2nd) safety time (flame signal of main flame with burners having an ignition gas valve).

Shut-off on trouble because the flame signal failed during burner operation or a lack of air has occurred.

◀ **Shut-off on trouble** during or after the control program flow due to external light (e.g. by flame not extinguished, leaking fuel valves) or a faulty flame signal (e.g. fault in flame monitoring circuit, or similar); see flame monitor.

If the shut-off on trouble occurs at any other time between start and pre-ignition that is not identified by a symbol as above, this will normally be due to an early flame signal which is considered to be a faulty flame signal.

The automatic furnace controller may be unlocked immediately after a shut-off on trouble using the unlock button with integrated fault signal lamp or an external switch. After it has been unlocked (and after a defect with resultant operating stop has been eliminated and after a voltage failure), the program unit will in any case return to its starting position with voltage being only supplied to terminals 7, 9, 10 and 11 as preset by the control program. It is only at this stage that the program of the automatic furnace controller will restart the burner.

www.elco.net

		Hotline
	ELCO Austria GmbH Aredstr.16-18 2544 Leobersdorf	0810-400010
	ELCO Belgium nv/sa Z.1 Researchpark 60 1731 Zellik	02-4631902
	ELCOTHERM AG Sarganserstrasse 100 7324 Vilters	0848 808 808
	ELCO GmbH Dreieichstr.10 64546 Mörfelden-Walldorf	0180-3526180
	ELCO Italia S.p.A. Via Roma 64 31023 Resana (TV)	800-087887
	ELCO Burners B.V. Amsterdamsestraatweg 27 1411 AW Naarden	035-6957350
	ООО «Ariston Thermo RUS LLC» Bolshaya Novodmitrovskaya St.bld.14/1 office 626 127015 Moscow -Russia	+7 495 783 0440

Made in EU.
Non contractual document.